

# **PRODUCT DATASHEET**

## DOWNLIGHTS | SPOTLIGHTS-ROUND

Downlights|Slim Trim|Angle Adjustable|Recessed mounted spotlight|5w|Round shape Code# RS03010-5



#### **Areas of Application**

- Hotel rooms
- Mall
- Living Room
- Office Room
- Shops
- Galleries

## **Product Features**

- Suitable for low consumption & high efficiency LEDs has high CRI and Luminous flux
- Light could be different types and models could satisfy all kinds of requirements
- Die-cast aluminum housing, ensure excellent heat dissipation
- Uniform light output and good consistency
- CCT optional and dimmable
- CRI>90
- Easy and quick installation
- 3 years warranty

## **Complete Product Data**

Code#	RS03010-5	
Wattage	5w	
Installation Type	Recessed	
Dimension	ф58mm*H85mm	
Cutout	φ50mm	
IP Rating	IP20	
Luminous Flux	350lm	
Beam Angle	24°36°	
Working Temperature	-25℃~55℃	
Certificates	/	
Warranty	3 Years	
Packing Size	/	

## **Driver Data**

Driver Brand	Tridonic, Osram, Philips, Lifud, Euchips, Eaglerise, etc.	
Input Voltage	100-250VAC 50/60hz	
Output Voltage	30-42Vdc	
Output Current	120mA	
Power Factor	>0.5 as standard; >0.9 optional	
Efficiently	80% @230v	
IP Rating	IP20	
Dimmable	Non-Dimmable/Triac/0-10v/Dali Optional	
Free Flicker	Yes	
Certificates	CE, CB, CCC, ENEC	
Warranty	3/5 Years	

## Material&Housing Data


Housing Color	White/Black
Housing Material	Die-casting Aluminum

## **Photometric Data**

LED chip brand	Cree/ Osram /Bridgelux/ Epistar etc.
Chip Type	СОВ
Color Temperature	2700K, 3000K, 4000K, 5000K, 6000K, 6500K
CRI	>80, >90
Life time	>50000Hrs
Lumens efficacy	110-135lm/w

SHENZHEN VIVISOMA CO.,LIMITED ADD: Office3A09,4# ShenLong West Lane, Longtian Street, PingShan District, Shenzhen, China. sales@vivisomaled.com

### **Dimensions&Installation**

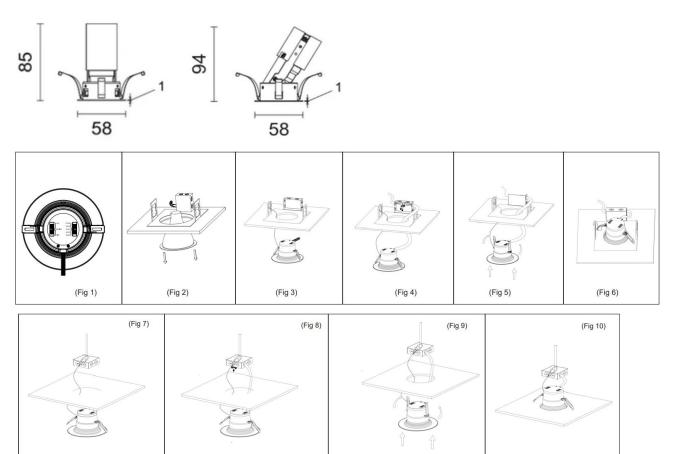

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the downlight.

1. Make sure the power is turned off in which you are installing the products.

2. If existing lamp and trim are present, remove from ceiling or move it out of the way as it will not be needed during installation. Measure the ceiling opening to make sure the edge of the downlight will cover the entire hole and still sit firmly in the ceiling before proceeding. (Fig 2)

- 3. Insert lamp conduit into the box and wire to power source (black to hot, white to neutral ) (Fig. 4).
- 4. Squeeze the two housing clips so they are in an upright position and insert lamp into housing. (Fig 5)

5. Once lamp is inside the housing, release the housing clips and continue pushing lamp into housing until securely fixed and flush with ceiling. (Fig 6)

6. Restore power at the source and the installation is complete.