

PRODUCT DATASHEET

DOWNLIGHTS | SPOTLIGHTS-ROUND

Downlights | Recessed mounted spotlight | 10w | Round shape | Anti-Glare Code# RS03025-10



Areas of Application

- Hotel rooms
- Mall
- Hospital
- Office Room
- Shops
- Corridors, stairways, entrance areas
- Galleries

Product Features

- High luminous efficacy
- Anti-glare
- Die-cast aluminum housing, ensure excellent heat dissipation
- Uniform light output and good consistency
- CCT optional and dimmable
- CRI>90
- Easy and quick installation
- 3 years warranty

Complete Product Data

Code#	RS03025-10	
Wattage	10w	
Installation Type	Recessed	
Dimension	ф115mm*H84mm	
Cutout	ф100mm	
IP Rating	IP20	
Luminous Flux	800lm	
Beam Angle	15° 24° 36°	
Working Temperature	-25℃~55℃	
Certificates	/	
Warranty	3 Years	
Packing Size		

Driver Data

Tridonic, Osram, Philips, Lifud, Euchips, Eaglerise, etc.	
100-250VAC 50/60hz	
30-42Vdc	
250mA	
>0.5 as standard; >0.9 optional	
83% @230v	
IP20	
Non-Dimmable/Triac/0-10v/Dali Optional	
Yes	
CE, CB, CCC, ENEC	
3/5 Years	

Material&Housing Data


Housing Color	White/Black
Housing Material	Die-casting Aluminum
Reflector Color	/


Photometric Data

Cree/ Osram /Bridgelux/ Epistar etc.
COB
2700K, 3000K, 4000K, 5000K, 6000K, 6500K
>80, >90
>50000Hrs
110-135lm/w

Dimensions&Installation



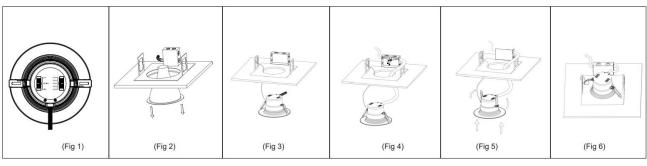

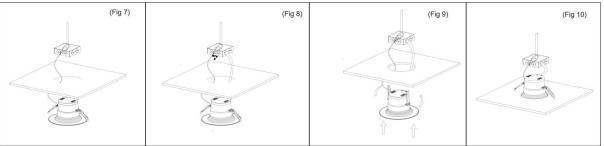

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the downlight.

- 1. Make sure the power is turned off in which you are installing the products.
- 2. If existing lamp and trim are present, remove from ceiling or move it out of the way as it will not be needed during installation. Measure the ceiling opening to make sure the edge of the downlight will cover the entire hole and still sit firmly in the ceiling before proceeding. (Fig 2)
- 3. Insert lamp conduit into the box and wire to power source (black to hot, white to neutral) (Fig. 4).
- 4. Squeeze the two housing clips so they are in an upright position and insert lamp into housing. (Fig 5)
- 5. Once lamp is inside the housing, release the housing clips and continue pushing lamp into housing until securely fixed and flush with ceiling. (Fig 6)
- 6. Restore power at the source and the installation is complete.